

CONTENTS

ANIMAL CROSSING™ ^[PRO]	2
GAMEPACK OVERVIEW	2
PRO CONTROLLER WIRED COMMUNICATION: ON.....	2
CONTROLLER CONVERSION TABLE	3
RESET BUTTON MAPPING	4
ENTER MENU MODE (MOD ACTIVATION)	5
ANALOG STICK DEADZONE	6
EASY FISHING	7
EASY NET	9
EASY TURBO / HOLD	11
VIDEO PLAYLIST	13

ANIMAL CROSSING™[PRO]



 
CRONUS ZEN™

GAMEPACK OVERVIEW

The Cronus Zen™ Animal Crossing™[PRO] Game Pack will assist you with your every day-to-day life on the wondrous island paradise of Animal Crossing™: New Horizons. With MODS that help you with fishing, running, picking up items, and more; your island experience will be greatly streamlined!

PRO CONTROLLER WIRED COMMUNICATION: ON

For the Animal Crossing™ MODS to function correctly, it is extremely important to set **“Pro Controller Wired Communication: On”** in your Nintendo Switch™ System Settings, under Controllers and Sensors.

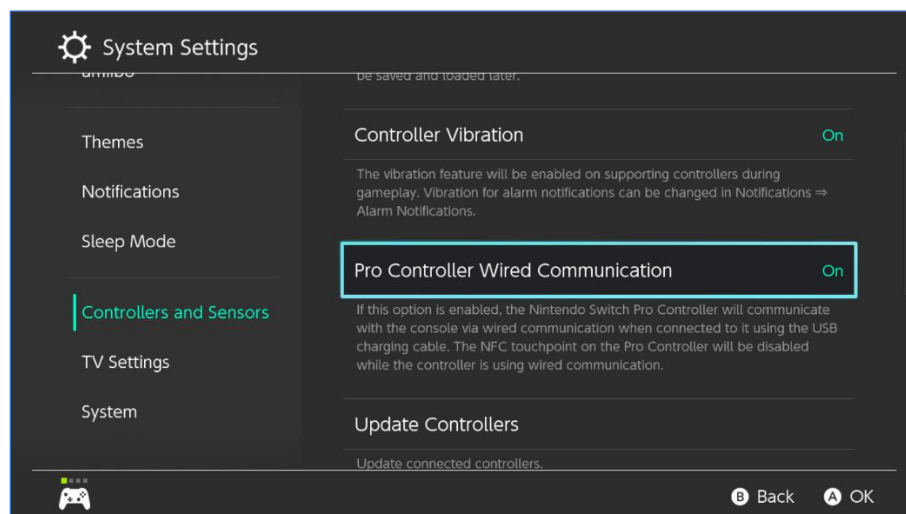

CONTROLLER CONVERSION TABLE


SW	WII	XB1	360	PS4	PS3
					
					
					
					
					
					
					
					
		LS	LS	L3	L3
		RS	RS	R3	R3
			 BACK	 SHARE	 SELECT
			START	 OPTIONS	START
HOME	HOME	HOME	GUIDE	PS	PS

RESET BUTTON MAPPING


If they have been altered, it is important to **RESET** your Button Mappings from the “Change Button Mapping” menu in your Nintendo Switch™ System Settings, under Controllers and Sensors.

Reset Button Mapping ★ Animal Crossing [PRO] ★ Cronus Zen  - https://youtu.be/OL_3G8zY0y8

 1. Navigate to System Settings and Controllers and Sensors.
2. Navigate to Change Button Mapping.

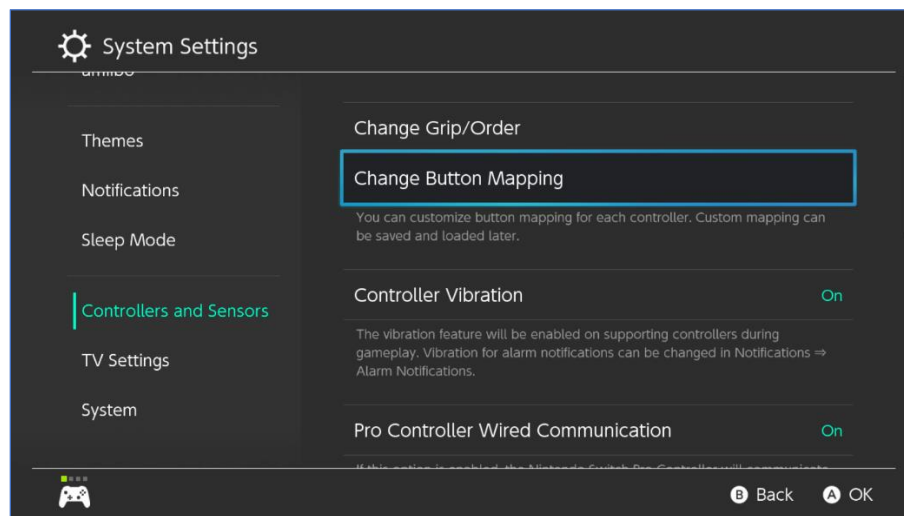

 
3. Select the Cronus Zen™ controller (it will show up as “Pro Controller”), select **Reset**, press OK and confirm. Reset and Save Mapping should be greyed out before you leave.

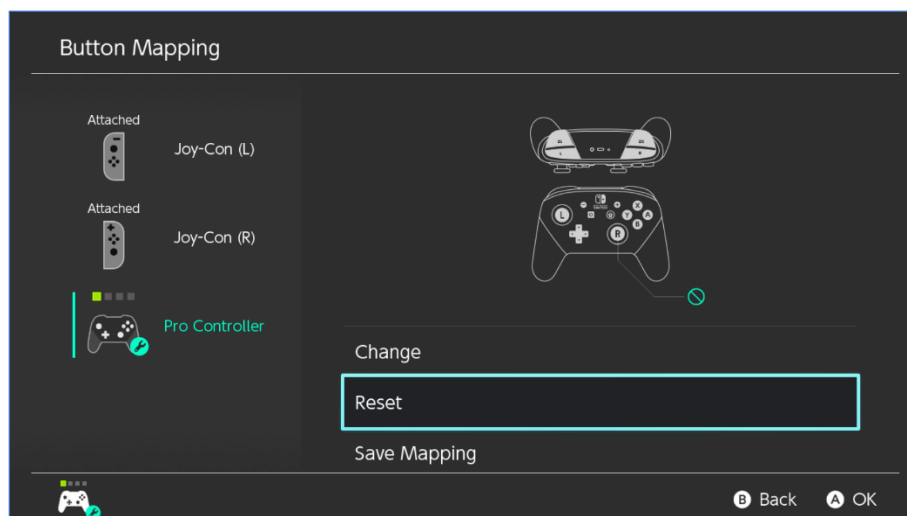


ENTER MENU MODE (MOD ACTIVATION)

You will be using the Menu Mode to toggle each of the MODS.



- HOLD  (XB: VIEW / PS: SHARE) until you feel a rumble and the OLED display changes to the **Menu Mode**.



- While in Menu Mode, TAPPING various buttons will toggle different MODS. This will be covered in each MOD section.
- You will feel a heavy rumble when toggling ON MODS, and a light rumble when toggling them OFF. This status is also displayed on the OLED.
- TAP  to exit Menu Mode.

ANALOG STICK DEADZONE


Some controllers have Analog Stick Drift causing issues during gameplay.


Analog Stick Deadzone ★ Animal Crossing [PRO] ★ Cronus Zen  - <https://youtu.be/pMC-82qRp6M>

Here are a couple of examples of this issue taking place:

- Your cursor in the Island Map drifts.
- Your character starts moving on their own, usually in one direction.
- Etc.

If you are experiencing any of the issues above, or something similar, you can use the Analog Stick Deadzone MOD to improve your analog sticks.

STEP 1: Enter MENU MODE. (HOLD  (XB: VIEW / PS: SHARE) until you feel a rumble and the OLED display changes to the Menu Mode.

STEP 2: TAP  (XB: MENU / PS: OPTIONS) to toggle the Analog Stick Deadzone MOD. You will feel a heavy rumble for ON and a light rumble for OFF. This status is also displayed on the OLED.




TAP  to exit Menu Mode.

You will still be able to make small movements, for example walking slowly to avoid scaring away bugs, but it will take more movement on the left analog stick.

 
EASY FISHING


When the Easy Fishing MOD is active, after you cast your rod, it will automatically catch the fish for you when you get a bite.



Easy Fishing ★ Animal Crossing [PRO] ★ Cronus Zen  - <https://youtu.be/m5TbRXmiPic>

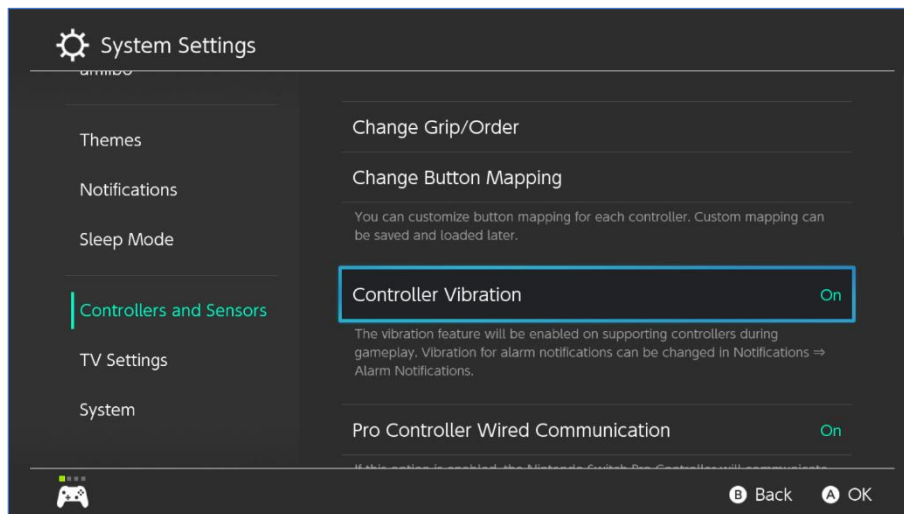

Make sure that your Controller Vibration is ON.



STEP 1: Enter MENU MODE. (HOLD  (XB: VIEW / PS: SHARE) until you feel a rumble and the OLED display changes to the Menu Mode.


 



STEP 2: TAP  (XB: LB / PS: L1) to toggle the Easy Fishing MOD. You will feel a heavy rumble for ON and a light rumble for OFF. This status is also displayed on the OLED. TAP  to exit Menu Mode.

STEP 3: Begin fishing, and the MOD will automatically catch the fish for you!

- The OLED will respond in real time to you catching a fish!




- There are 5 possible items to be found on the OLED.


55%	20%	10%	10%	5%
				
Fish	CM Logo	Boot	Ball	Mask


EASY NET

When the Easy Net MOD is active, accessing and pulling up the net for use will be much more convenient.

Easy Net ★ Animal Crossing [PRO] ★ Cronus Zen  - <https://youtu.be/C7O3HBINNjs>




STEP 1: Enter MENU MODE. (HOLD  (XB: VIEW / PS: SHARE) until you feel a rumble and the OLED display changes to the Menu Mode.




STEP 2: TAP  (XB: RB / PS: R1) to toggle the Easy Net MOD. You will feel a heavy rumble for ON and a light rumble for OFF.


This status is also displayed on the OLED.




TAP  to exit Menu Mode.


STEP 3: HOLD  (XB: LS / PS: L3) to open your inventory wheel.

- While HOLDING , select your net using the left or right analog stick, then let go of .
- The OLED will display where the  net location is saved.

STEP 4: Now whenever you PRESS , the MOD will automatically select the net.

- You can also PRESS or HOLD  (XB: RS / PS: R3) to quickly open your inventory wheel.
- Once the wheel opens up, you can select items using either the left or right analog sticks.




- The item will be selected once you have chosen an item and you are no longer holding .

EASY TURBO / HOLD

The Easy Turbo / Hold MOD allows you to select one of three options for each face button, to assist with various gameplay actions...

Easy Turbo / Hold ★ Animal Crossing [PRO] ★ Cronus Zen  - <https://youtu.be/VFPBcQjBdt8>

STEP 1: Enter MENU MODE. (HOLD  (XB: VIEW / PS: SHARE) until you feel a rumble and the OLED display changes to the Menu Mode.

STEP 2: Cycle through the three Turbo MODS on any of the four face buttons



. One heavy rumble is **Turbo**, two rumbles is **Hold**, three rumbles is **Constant Turbo**, and a light rumble is back to normal.

- "Turbo" will cause the face button to be rapidly pressed while you are holding it.
 - This is especially useful for picking up weeds and fruit (Turbo Y) or mining out rocks (Turbo A).




- **"Hold"** will cause the face button to be held while the button is released.
 - This is useful for actions such as speeding up text and automatically running (Hold B).



- **"Constant Turbo"** will be constantly and rapidly pressing the face button while the button is released.
 - This is useful for wishing on shooting stars (Constant Turbo A).



- TAP  to exit Menu Mode. As you are using this MOD, you will see which buttons are being pressed on the OLED.


VIDEO PLAYLIST


Cronus Zen - Animal Crossing [PRO] Playlist -

<https://www.youtube.com/playlist?list=PLW21qDBtC-6S5Y2HpPdiSs7hMbguUzZ9j>

Reset Button Mapping ★ Animal Crossing [PRO] ★ Cronus Zen  - https://youtu.be/OL_3G8zY0y8

Analog Stick Deadzone ★ Animal Crossing [PRO] ★ Cronus Zen  - <https://youtu.be/pMC-82qRp6M>

Easy Fishing ★ Animal Crossing [PRO] ★ Cronus Zen  - <https://youtu.be/m5TbRXmiPic>

Easy Net ★ Animal Crossing [PRO] ★ Cronus Zen  - <https://youtu.be/C7O3HBINNjs>

Easy Turbo / Hold ★ Animal Crossing [PRO] ★ Cronus Zen  - <https://youtu.be/VFPBcQjBdt8>